







TEMCO INTERNATIONAL LIMITED

EXPERTISE LEAD EXCELLENCY

Tel: 0086-577-88802125 Fax: 0086-577-88802126

ITEM	TEMCO NO.	中文描述	OEM NO	P/NO.	APPLICTION	PICTURE	UNIT
HANDLE LEVER,RIGHT	TM-ST-001	把手	53175-KCS-W60	F-3-18	HONDA STORM,RIGHT		PC
HANDLE LEVER,LEFT	TM-ST-002	把手	53178-KCS-W60	F-3-19	HONDA STORM,LEFT		PC
HANDLE LEVER	TM-ST-003	把手	53175-KPN-910	F-4-11	HONDA STORM,DISC		PC
HEADLIGHT	TM-ST-004	前大灯	33120-KTJ-870	F-1-1	HONDA STORM		PC
REGULATOR	TM-ST-005	调节器	31600-KRF-B50	F-28-5	HONDA STORM		PC
WINKER LAMP	TM-ST-006	转向灯	33450-KTJ-870	F-25	HONDA STORM L/R		PC

HANDLE HOLDER	TM-ST-007	把手支座	53172-KCS-W60	F-3-16	HONDA STORM		PC
COIL PLATE SET	TM-ST-008	磁电机线圈	31120-KRF-B40	E-9-5	HONDA STORM STATOR COMP,		SET
STARTER	TM-ST-009	起动机	31200-KRF-T00	E-11-1	HONDA STORM MOTOR ASSY STARTING		PC
COVER COMP.,CRANKCASE	TM-ST-010	曲轴箱尾盖	11361-KTJ-900	E-8-3	HONDA STORM COVER L RR CRANKCASE		PC
CAM SHAFT, ALXI	TM-ST-011	轴销	14423-KRF-S00	E-3-6	HONDA STORM,H S,H STORM		PC
COLLECTOR	TM-ST-012	化油器接口	16210-KRF-B40	E-2-4	HONDA STORM,H S,H STORM		PC
CYLINDER HEAD	TM-ST-013	汽缸头	12200-KSH-930	E-2-1	HONDA STORM,H S,H STORM		PC
ENGINE VALVE,IN	TM-ST-014	进气门	14711-KRF-S00	E-3-13	HONDA STORM		PC

ENGINE VALVE,EX	TM-ST-015	出气门	14721-KRF-S00	E-3-14	HONDA STORM		PC
HANDLE CONE SET	TM-ST-016	压力轴承		F-6	HONDA STORM		SET
OIL PUMP	TM-ST-017	机油泵	15100-KRF-S00	E-7-1	HONDA STORM,H S,H STORM		PC
PLATE ROCKER HOLDER SET	TM-ST-018	上摇臂	12210-KYO-890	E-3-2	HONDA STORM		SET
VALVE GUIDE	TM-ST-019	气门导管	12204-KRF-P00	E-2-2	HONDA STORM,H S,H STORM		PAIR
CAM SHAFT FOLLOWER	TM-ST-020	摇臂销	14422-KRF-S00	E-3-5	HONDA STORM,H S,H STORM		PC
GEAR,TACHOMETER	TM-ST-021	仪表齿轮	44800-KEH-930	F-11-1-8	HONDA STORM		PC
OIL PRESSURE GAUGE	TM-ST-022	机油齿	15650-KC1-000	E-5-3	HONDA STORM		PC

GASKET,CYLINDER HEAD	TM-ST-023	汽缸头垫	12391-KRF-500	E-1-4	HONDA STORM		PC
BRAKE DISC	TM-ST-024	刹车碟	45251-KEW-670	F-11-1-11	HONDA STORM,H STORM		PC
FUEL TANK	TM-ST-025	油箱	17520-KTJ-900	F-14-8	HONDA STORM		PC
METER ASSY	TM-ST-026	仪表总成	37100-KTJ-900	F-2-3	HONDA STORM,H S,H STORM		SET
REAR FORK	TM-ST-027	后平叉总成	52100-KTJ-900	F-22-5	HONDA STORM,H S,H STORM		PC
ALLOY SPOKE WHEEL	TM-ST-028	铝轮		F-13-12-F	HONDA STORM FRONT FOR DISK 前, 碟刹,silver color 银色		PC

ALLOY SPOKE WHEEL	TM-ST-029	铝轮		F-13-12	HONDA STORM REAR,silver color,后/银色		PC
ALLOY SPOKE WHEEL	TM-ST-030	铝轮		F-13-12-R	HONDA STORM FRONT FOR BRAKE SHOE 前,鼓刹,silver color 银色		PC
FORK BUSH	TM-ST-031	前叉衬套	52147-KRF-S00	F-22-7	HONDA STORM,H S,H STORM		SET
GEAR SHIFT	TM-ST-032	变速轴		E-15	HONDA STORM,H S,H STORM		SET
MAIN STAND	TM-ST-033	主支架	50500-KTJ-900	F-21-1	HONDA STORM,H S,H STORM		PC
MUFFLER ASSY	TM-ST-034	排气管总成	18300-KTJ-900	F-18-5	HONDA STORM,H S		SET

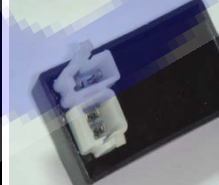

DRUM,REAR SPROCKET	TM-ST-035	链轮安装座	42615-KRF-R30	F-13-10	HONDA STORM		PC
BRAKE ARM REAR	TM-ST-036	后制动摇臂	431410-KRF-B40	F-12-9	HONDA STORM,H S,H STORM		PC
CAM BRAKE	TM-ST-037	制动凸轮	43141-KRV-900	F-12-6	HONDA STORM,H S,H STORM		PC
MASTER CYLINDER	TM-ST-038	液压泵	45510-KRF-T10	F-4-4	HONDA STORM		SET
VALVE STEM SEAL	TM-ST-039	气门油封	12208-KCS-920	E-3-1	HONDA STORM,CBZ125,2pcs/set,FKM		PAIR
NUT,CAP	TM-ST-040	盖型螺母	90304-KRF-S00	F-5-11	HONDA STORM		PC
PUSH ROD	TM-ST-041	气门顶杆	14440-KRF-S00	E-3-10	HONDA STORM		PC
SEAT	TM-ST-042	座垫	77200-KTJ-900	F-15-3	HONDA STORM		PC



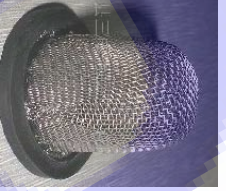



GEAR	TM-ST-043	齿轮	14100-KRF-B40	E-3-3	HONDA STORM		PC
COUNTER/MAIN SHAFT COMPLETE SET	TM-ST-044	全套主轴和副轴		E-14	HONDA STORM		SET
COVER,CYLINDER	TM-ST-045	汽缸盖		E-1-2	HONDA STORM		PC
ROCKER ARM	TM-ST-046	下摇臂		E-3-4	HONDA STORM		PC
SPRING,CLUTCH	TM-ST-047	离合器压簧		E-3-15/16	HONDA STORM		SET
VALVE COTTER	TM-ST-048	气门锁夹		E-3-20	HONDA STORM		SET
CYLINDER	TM-ST-049	气缸		E-4-1	HONDA STORM		PC

CLUTCH BOX ASSY	TM-ST-050	离合器总成		E-6	HONDA STORM		SET
OUT CLUTCH BOX	TM-ST-051	离合器外罩		E-6-1	HONDA STORM		PC
CLUTCH DISC,IRON	TM-ST-052	离合器钢片		E-6-4	HONDA STORM		PC
OIL PUMP KUPPER	TM-ST-053	机油杯		E-7-6	HONDA STORM		PC
MAGNET COVER	TM-ST-054	磁电机转子		E-9-4	HONDA STORM		PC
CLUTCH COMP.STARTING ONE WAY	TM-ST-055	超越离合器		E-9/10-1	HONDA STORM		SET

CRANK SHAFT ASSY	TM-ST-056	曲轴总成		E-13-1	HONDA STORM		SET
KICK SHAFT ASSY	TM-ST-057	启动轴总成		E-16	HONDA STORM		SET
KICK SHAFT	TM-ST-058	启动轴		E-16-3	HONDA STORM		PC
GEAR ,STARTING	TM-ST-059	启动齿		E-16-1、2	HONDA STORM		PAIR
SPRING,STARTING	TM-ST-060	启动簧		E-16-5	HONDA STORM		PC
HANDLE SWITCH L/R	TM-ST-061	左右把坐		F-3-5/6	HONDA STORM		SET
HANDLE STEERING PIPE	TM-ST-062	方向把		F-5-4	HONDA STORM		PC
STEM COMP.,STEERING	TM-ST-063	方向柱总成		F-6-9	HONDA STORM		SET

FROK ASSY,FRONT	TM-ST-064	前叉总成		F-8-1/5	HONDA STORM		SET
BRAKE PAD	TM-ST-065	刹车片		F-10-2-06455	HONDA STORM		SET
CHAIN ADJUSTER	TM-ST-066	链条调节器		F-12-2	HONDA STORM		SET
FLOAT ASSY	TM-ST-067	油浮子		F-14-12	HONDA STORM		SET
AIR FILTER ASSY	TM-ST-068	空滤器总成		F-17	HONDA STORM		SET
SIDE STAND ASSY	TM-ST-069	侧支架总成		F-20-2	HONDA STORM		SET
REAR FOOTREST ASSY	TM-ST-070	后脚踏胶总成		F-20-4	HONDA STORM		SET

PEDAL SUPPORT ASSY	TM-ST-071	脚踏支架总成		F-20-8/9	HONDA STORM		SET
RELAY	TM-ST-072	继电器		F-27-13	HONDA STORM		PC
CDI UNIT	TM-ST-073	点火器		F-28-2	HONDA STORM		PC
IGNITION SWITCH	TM-ST-074	点火线圈		F-28-3	HONDA STORM		PC
HOOK	TM-ST-075	挂钩及簧		F-21-3、11	HONDA STORM		PAIR
SIDE STAND	TM-ST-076	侧支架		F-21-6	HONDA STORM		PC

FRONT WHEEL AXLE	TM-ST-077	前轴销		F-11-2	HONDA STORM		PC
REAR WHEEL AXLE	TM-ST-078	后轴销		F-13-5	HONDA STORM		PC
OIL FILTER SCREEN	TM-ST-079	机油滤清器网		E-12-8	HONDA STORM		PC
TAPPET CAOVER	TM-ST-080	气门盖		E-12-4	HONDA STORM		PC
OUTER COMP.,STARTING CLUTCH	TM-ST-081	起动机盘		E-9-1	HONDA STORM		PC
REAR BRAKE PANNEL ASSY	TM-ST-082	后轮毂盖总成		F-9-8	HONDA STORM		SET

